



LCR-Reader®

MENU STRUCTURE

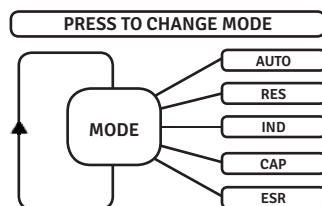

DISPLAY LAYOUT

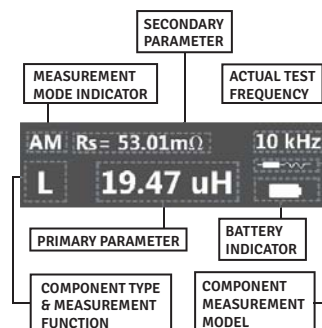

Measurement Functions

AM - auto identification of L, C or R

L - inductance + resistance

R - resistance

C - capacitance + resistance

ESR - equivalent series resistance

Test Frequency:

Auto selected test frequency

100Hz, 1kHz, 10kHz

Component Measurement Model:

Serial (Rs) or Parallel (Rp)

www.LCR-Reader.com



DISCHARGE CAPACITOR BEFORE MEASURING